



User manual

Sauté Set 20"

Gas burner | Sauté pan 20" | Regulator set

Safety Instructions:

Please read this user manual carefully before use.

- This gas burner is designed for outdoor use only. Do not use indoors or in enclosed spaces.
- Do not move the gas burner while in operation, as this poses a fire hazard.
- Use the gas burner only for its intended purpose.

WARNING



- **Parts of the gas burner and griddle become extremely hot during use.**
- **Keep small children and pets away from the gas burner at all times.**
- **Always close the gas cylinder valve after use.**
- **Use heat-resistant grill gloves when handling a hot griddle.**
- **Store in a dry place when not in use. Water entering the gas burner can block the propane flow, leading to a fire hazard at the gas valves.**

Gas installation:

Connect the gas burner to a 30 mbar pressure regulator using an approved gas hose and hose clamps.

Always use a gas cylinder connected to a pressure regulator. The hose must not be bent or twisted.

Use soapy water to check for leaks in the gas hose and connections. Never test with fire.

Ignition:

Before using the gas burner and connecting it to a gas cylinder, ensure that all valves are closed and that there are no open flames, embers (e.g., smokers), or flammable materials nearby.

Place the gas burner on a stable, flat surface protected from strong winds and always in a horizontal position. Note that the gas burner must not be placed near flammable materials.

Exhaust gases from the griddle edges are extremely hot.

For sets with 2-ring burners:

The burner has two burner rings with individual valves. Open the inner ring

valve fully, ignite the gas, and adjust the flame to a suitable size using the valve. Then, ignite the outer ring in the same way as the inner ring and place the pan on the burner after ignition.

For sets with 3-ring burners:

The burner has three burner rings with individual valves. Open the inner ring valve fully, ignite the gas, and adjust the flame to a suitable size using the valve. Then ignite the middle ring, followed by the outer ring in the same manner as the inner ring. Place the griddle pan on the burner after ignition.

Always reduce the burner flame when necessary to save gas. Do not leave the burner unattended while in use. If the flame goes out, turn off the gas valve and relight it after a short while following the instructions.

Extinguishing the Burner:

Turn off the burner by closing its valves and always close the valve on the gas cylinder's pressure regulator after use. Wait until the burner has cooled before moving it.

Replacing the Gas Cylinder:

First, turn off the burner valves and the valve on the cylinder's pressure regulator. Disconnect the regulator and replace the cylinder. Ensure the pressure regulator and gas cylinder are securely connected.

Maintenance and Storage of the Gas Burner:

Clean the burner after use and store it in a dry place. Before use, check that the holes in the burner rings are clear. Regularly inspect the gas hose for leaks, wear, or cracks.

If a Leak Occurs:

Close the valve on the cylinder's pressure regulator. Do not use the burner if it is defective. Except for replacing the gas hose and pressure regulator, all repairs and maintenance should be carried out by a qualified service company authorized for gas installations.

Technical Specifications:

GAS: Propane

PRESSURE: 30 mbar

CLASS: I3B/P (30)

 
MAXIMUM GAS CONSUMPTION:

Gas burners Ø 16 inch (40 cm): Power output 38 500 BTU (11.4 kW)

Gas burners Ø 24 inch (60 cm): Power output 71 600 BTU (21.0 kW)


Installation instructions

Installation of the gas burner legs

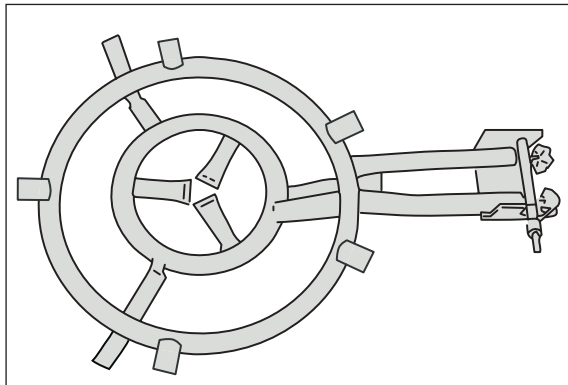


1.

 Take the gas burner (1) out of the packaging and place it upside down on a smooth and durable surface.

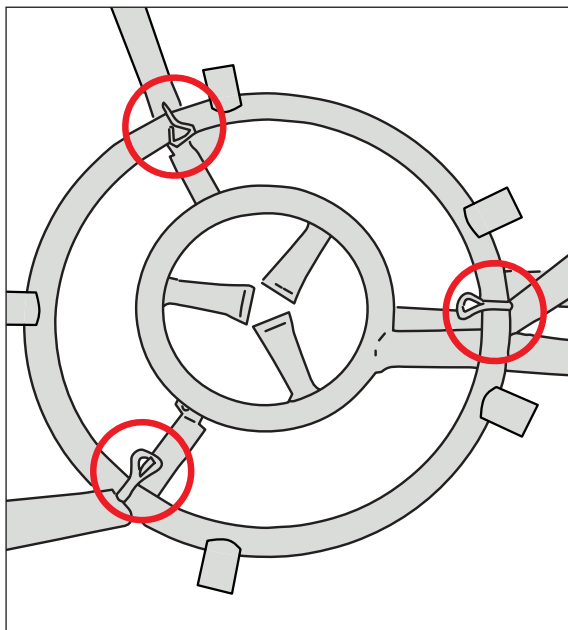


2.

 Install the legs (2) on the underside of the gas burner with the three wing screws (6). Do not pull these too tightly during assembly, instead tighten them when the utility shelf is in place.

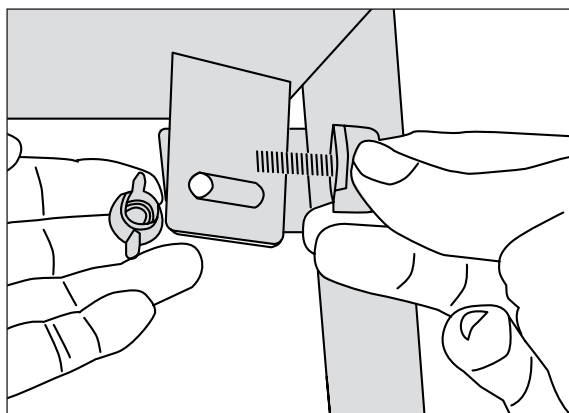

3.

 
Screw the utility shelf in place with the screws and nuts provided (7).

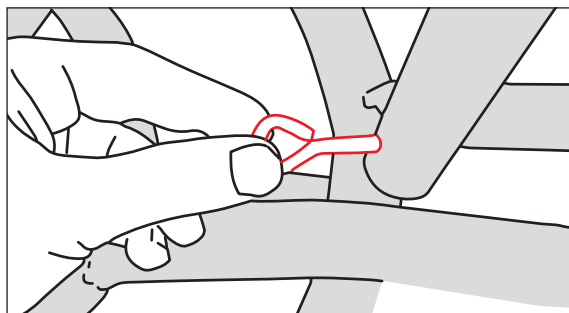

4.


Tighten the wing screws on the legs tightly so that they are firmly seated in the burner.

 Installation of windshields

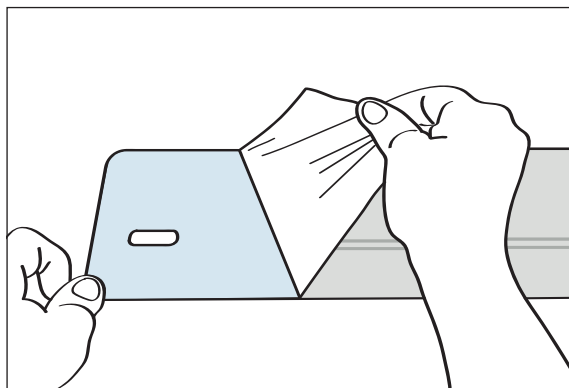


5.

 Remove the protective plastic from the windshields (4).

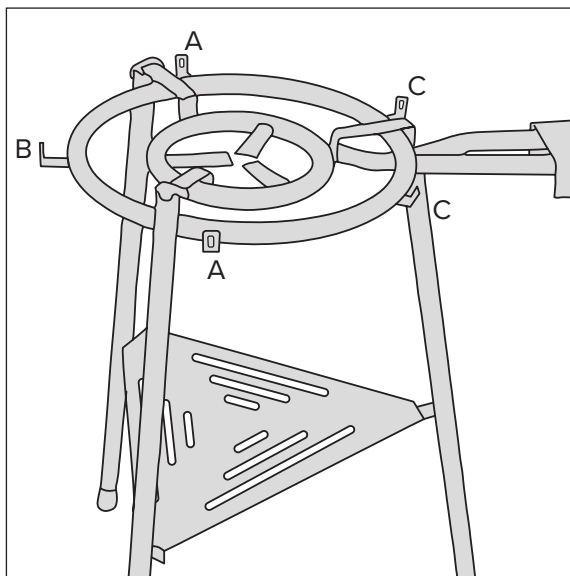

6.

 Turn the burner upright on to its legs.

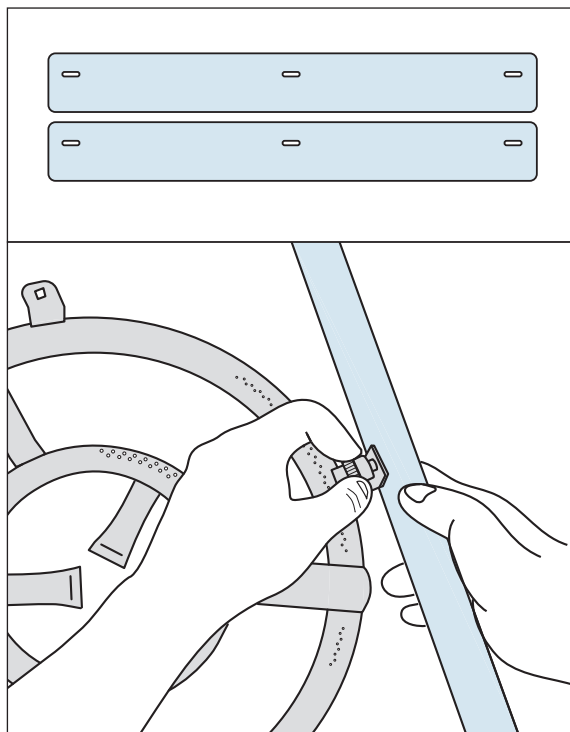


7.

Fasten both windshields with provided screws and nuts (5).

Fasten in the middle hole to A (see figure 6).

Fit the windshields with the screw holes facing upwards.

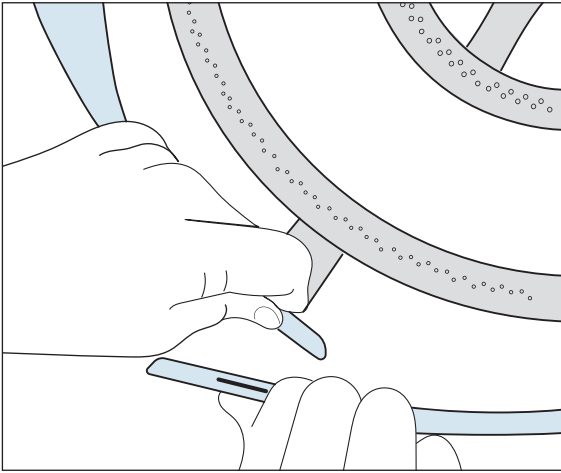

8.

Overlap the windshields and screw them to B. Fasten the opposite ends of the windshields to C.



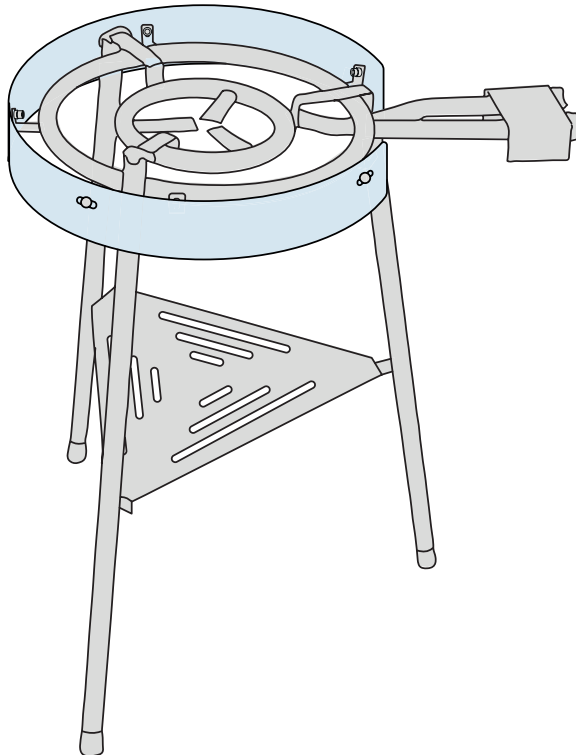 


Table of contents

 1. Gas burner 16 inch (40 cm)
2. 3 x Legs for the gas burner
3. 1 x Utility shelf for gas burner
4. 2 x Windshields
5. 5 x Screws and nuts for the windshields to attach it to the gas burner
6. 3 x Wing screws to attach the legs to the gas burner
7. 3 x Screws with nut to attach the utility shelf to the legs
8. 1 x Gas hose with regulator
9. 1 x Sauté pan 20"

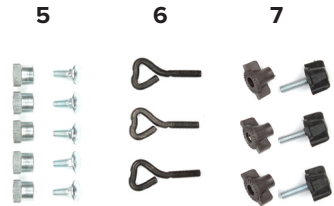

6

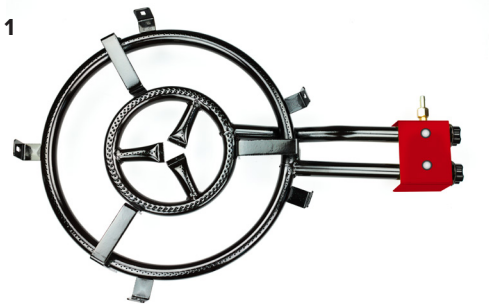 

7



8



9

